

## Basic Operations

### **NOTE**

The explanation of functions described in this manual may differ from the actual operation, and the shapes of screens and buttons and the letters and characters displayed may also differ from the actual appearance. Additionally, depending on future software updates, the content may successively change without notice.

## Navigation\*

The navigation system can only be used when the SD card for the navigation system is inserted.

If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed. The compass may not indicate the correct bearing when the vehicle is stopped or traveling at a slow speed. For the navigation system operation, refer to the navigation system manual.

## Settings

Your vehicle has systems and equipment with settings that you can change to operate according to your preferences.

Consult an Authorized Mazda Dealer for details.

### NOTE

- Available settings depend on vehicle equipment and features.
- The system automatically displays only the available settings for your vehicle. Depending on your vehicle's specifications, you may be unable to change some setting even though they are indicated in the manual.
- Depending on the function, some settings linked to other functions cannot be changed.
- The content of setting changes due to updates to the vehicle software may change without notice.

### How To Make Setting Changes

1. Select "Settings" from the Mazda Connect home screen.
2. Select the item setting you would like to change from the displayed content.
3. Change the function setting.

### NOTE

Place a check in the check box for the function you want to enable () or uncheck it to disable () the function.

### Changeable System Settings/Equipment List

#### EV Settings

Refer to EV Settings on page 2-119.

- Charge When Connected
- Charging Schedule
- Climate Control Timer
- Charge Limit for AC Charging
- Charge Limit for DC Fast Charging
- Charge Connector Lock
- High Voltage Battery Heater
- Regenerative Braking Level
- EV Priority Mode

- Driving Charge Target

### **In-Vehicle Displays**

Configures settings and content for all in-vehicle displays. Refer to In-Vehicle Displays on page 2-123.

- Active Driving Display
- Center Display
- Instrument Cluster Display

### **Sound Settings**

Configures the in-vehicle listening experience. Refer to Sound Settings on page 2-125.

- Audio Settings
- Vehicle Notification and Warning Volume

### **Safety Settings**

Configures safety and driver assistance features. Refer to Safety Settings on page 2-127.

- Driver Assistance System
- Safety Alerts
- Active Safety
- Collision Avoidance
- View Monitor
- Parking Sensor
- Speed Alert
- Pedal Misuse Alert

### **Vehicle Settings**

Configures vehicle convenience features. Refer to Vehicle Settings on page 2-135.

- Paddle Shift Logic
- Doors
- Exterior Lighting
- Interior Lighting
- Rain-Sensing Wipers
- Automatic Folding Side Mirrors
- Turn Signals
- Rear Window Defogger

- Link Seat & Climate Control Temperatures
- Occupant Comfort
- Rear Seat Alert
- Airbags
- Driving Position
- Fuel Door Lock Delay

## Connectivity Settings

Configures Bluetooth and other device connectivity settings.  
Refer to Connectivity Settings on page 2-140.

- Bluetooth® Settings , Bluetooth®/Phone Connectivity Settings
- Smartphone Connectivity Settings
- Wireless Charging Settings
- Wi-Fi Settings

## Driver Personalization System

Registers a driver or edits the driver information.  
Refer to Driver Personalization System on page 2-151.

- Driver Personalization System

## System Settings

Configures language, time, and other general settings.  
Refer to System Settings on page 2-152.

- Clock
- Driver Settings
- Voice Recognition Settings
- Language
- Temperature
- Distance/Speed
- Fuel Efficiency
- Energy Efficiency
- Fuel/Energy Efficiency
- Pressure
- Gracenote Database Update
- Use Gracenote Database Album Art
- Connected Services
- Software Update
- System Information
- Restore All Factory Settings

## EV Settings\*

### Charge When Connected

Cancels charging schedule to allow immediate charging.

Available setting changes
Enable, Disable

### Charging Schedule

Selects desired vehicle charging days and times.

Function	Available setting changes	
1 ---	Enable, Disable* <sup>1</sup>	Edit, Delete* <sup>2</sup>
2 ---		
3 ---		
4 ---		
5 ---		
6 ---		
7 ---		

\*<sup>1</sup> If a list selected using the cursor has been set, the item can be Enable or Disable.

\*<sup>2</sup> Settings can be "Edit"/"Delete" by sliding a list selected using the cursor to the right.

### Edit

Function	Available setting changes
<b>Start Time</b> Select the desired charging start time.	Time (10-minute intervals)
<b>End Time</b> Select the desired charging end time.	Time (10-minute intervals)
<b>Repeat</b> Select the day(s) of the week to repeat.	Monday — Sunday
<b>Charge Limit</b> Select the desired charge limit method.	According to Battery Charge Level, According to Estimated Range
<b>Battery Charge Level</b> <sup>*1</sup> Select the desired maximum charge level.	100% — 10% (10 levels)/ 100% — 20% (9 levels)
<b>Estimated Range</b> <sup>*2</sup> Select the desired estimated range.	In 10 km (10 mile) increments

- \*1 If According to Battery Charge Level is selected using the charge amount setting, the setting can be changed.
- \*2 If According to Estimated Range is selected using the charge amount setting, the setting can be changed.

### Climate Control Timer

Allows climate control to adjust cabin temperature before driving.

Function	Available setting changes	
1 ---	Enable, Disable <sup>*1</sup>	Edit, Delete <sup>*2</sup>
2 ---		
3 ---		
4 ---		
5 ---		
6 ---		
7 ---		

- \*1 If an item selected using the cursor has been set, the item can be enabled or disabled.
- \*2 Settings can be “Edit”/“Delete” by sliding an item selected using the cursor to the right.

### **Edit**

Function	Available setting changes
<b>Departure Time</b> Select the desired departure time.	Time (10-minute intervals)
<b>Repeat</b> Select the day(s) of the week to repeat.	Monday — Sunday
<b>Temperature</b> Selects the desired cabin temperature for the climate control timer.	15.5°C (61 °F) — 28.5°C (83 °F)
<b>Front Defroster</b>	Enable, Disable
<b>Rear Defroster</b>	Enable, Disable

### **Charge Limit for AC Charging**

Sets the charge limit when using an AC charger.

Available setting changes
100% — 10% (10 levels)/ 100% — 20% (9 levels)

### **Charge Limit for DC Fast Charging**

Sets the charge limit when using a DC Fast charger.

Available setting changes
100% — 10% (10 levels)/ 100% — 20% (9 levels)

### **Charge Connector Lock**

Configures when the charge connector is locked.

Available setting changes
Locked When Charging Unlocks connector when charging is complete or vehicle is unlocked.
Locked When Connected Unlocks connector only when vehicle is unlocked.
Off Charge connector remains unlocked at all times.

### **High Voltage Battery Heater**

Configures the high voltage battery heater operation.

Available setting changes
Automatic, Off



## Regenerative Braking Level

Sets the desired regenerative braking level.

Available setting changes
Normal, High

## EV Priority Mode

Prioritizes EV Mode upon vehicle start up.

Available setting changes
Enable, Disable

## Driving Charge Target

Sets the target charge level for the high-voltage battery.

Available setting changes
100% — 20% (9 levels)

## In-Vehicle Displays

Configures settings and content for all in-vehicle displays.

### Active Driving Display

Adjusts the content and visibility of the display.

Function	Available setting changes
<b>Height</b> Adjusts the height of the Active Driving Display.	Height (31 levels)
<b>Auto Brightness</b> Automatically adjusts brightness based on ambient lighting levels.	Enable, Disable
<b>Brightness</b> Adjusts the brightness of the Active Driving Display.	Brightness (11/41 levels)
<b>Tilt Adjustment</b> Adjusts the rotation of the Active Driving Display.	Tilt (11 levels)
<b>Active Driving Display Content</b> Enables the display and selected content to be shown.	Enable, Disable
<b>Navigation Guidance</b> Displays navigation route guidance information.	Enable, Disable
<b>Street Name</b> Displays street names.	Enable, Disable
<b>Lane Guidance</b> Displays navigation lane guidance information.	Enable, Disable
<b>Traffic Sign Recognition</b> Displays stop signs, speed limit signs, and do not enter signs.	Enable, Disable
<b>Speed Limit</b> Displays a speed limit.	Enable, Disable
<b>Estimated Time of Arrival</b> Displays the estimated time of arrival.	Enable, Disable
<b>Restore Factory Settings</b> Restores the Active Driving Display to the original factory settings.	—

## Center Display

Adjusts the display brightness, contrast, and more.

Function	Available setting changes
<b>Display Off</b> Turns off the display while still providing audio content.	—
<b>Day/Night Mode</b> Selects the center display brightness mode.	Automatic, Day, Night
<b>Brightness</b> Adjusts the brightness of the center display.	Brightness (11 levels)
<b>Contrast</b> Adjusts the contrast of the center display.	Contrast (11 levels)
<b>Show Drive Results at Ignition Off</b> Provides energy efficiency results at the end of the drive.	Enable, Disable
<b>Home Screen Clock</b> Selects the clock style displayed on the Home screen.	Analog, Digital
<b>Ambient Display</b> Enables a simplified interface accessible from the Home screen.	Blank, Clock
<b>Restore Factory Settings</b> Restores the display to the original factory settings.	—

## Instrument Cluster Display

Selects the content shown on the instrument cluster.

Function	Available setting changes
<b>Fuel Efficiency &amp; Range Display</b> Configures how the fuel efficiency and driving range is shown.	Type 1, Type 2, Off
<b>Increase Text Size</b> Displays instrument cluster text in a larger size.	Enable, Disable
<b>Always Show i-ACTIVSENSE Display</b> Enables i-ACTIVSENSE information to always be shown on the instrument cluster display.	Enable, Disable
<b>Restore Factory Settings</b> Restores instrument cluster display settings to factory defaults.	—

## Sound Settings

Configures the in-vehicle listening experience.

### Audio Settings

Adjusts the in-vehicle listening experience.

Function	Available setting changes
<b>Sound Adjustment Mode</b> Selects a Basic or Advanced sound adjustment mode.	Basic, Advanced
<b>Bass</b> Adjusts the bass output level.	Bass range (19 levels)
<b>Treble</b> Adjusts the treble output level.	Treble range (19 levels)
<b>Equalizer</b> Selects or creates the desired equalizer curve.	Flat, Pop, Rock, Jazz, R&B, Classical, Custom 1 <sup>1</sup> , Custom 2 <sup>1</sup> , Custom 3 <sup>1</sup> , Customize EQ <sup>2</sup>
<b>Listening Position</b> Selects the desired listening position.	Driver's Seat, All Seats
<b>Fader</b> Moves the audio emphasis forward or rearward.	Front — Rear (19 levels)
<b>Balance</b> Moves the audio emphasis to the left or right.	Left — Right (19 levels)
<b>Automatic Level Control</b> <sup>3</sup> Automatically adjusts volume level to compensate for vehicle speed.	Off, 1 — 7 (8 levels)
<b>Automatic Source Level Adjustment</b> <sup>4</sup> Automatically stabilizes volume levels across sources.	Enable, Disable
<b>Bose Stereo Mode</b> Selects the desired stereo listening experience.	Standard, Linear
<b>Bose Centerpoint</b> <sup>5</sup> Creates a virtual surround sound listening experience.	Off, 1 — 3 (4 levels)

Function	Available setting changes
<b>Bose AudioPilot<sup>*6</sup></b> Automatically adjusts the music to compensate for road noise.	Off, 1 — 3 (4 levels)

- \*1 Equalizer setting saved in “Customize EQ” of the “Equalizer” item.
- \*2 You can edit and save the equalizer setting manually according to your preferences.
- \*3 The automatic level control (ALC) changes the audio volume automatically according to the vehicle speed. The faster the vehicle speed, the higher the volume increases. The slower the vehicle speed, the lower the volume decreases.
- \*4 This function adjusts the volume automatically, therefore the volume level changes depending on the content.
- \*5 Centerpoint lets vehicle owners enjoy a Bose surround sound experience.  
 Specifically engineered to meet the unique demands of reproducing surround sound in a vehicle. Converts stereo signals to multiple channels allowing greater precision when reproducing the sound. An enhanced algorithm to simultaneously create a wider, more spacious sound field. Centerpoint is a registered trademark of Bose Corporation.
- \*6 When driving, background noise can interfere with enjoying music.  
 AudioPilot Noise compensation technology continuously adjusts the music to compensate for background noise and vehicle speed.  
 It reacts only to sustained noise sources and not intermittent ones, such as speed bumps.  
 An enhanced DSP algorithm allows faster and more effective compensation for unusual situations, such as driving on a very rough road or at high speeds.  
 AudioPilot is a registered trademark of Bose Corporation.

### Vehicle Notification and Warning Volume

Adjusts the alert volume for notifications and warnings.

Available setting changes
Low, Moderate, High

### System Button Volume

Sets the confirmation volume level for commander and steering wheel controls.

Available setting changes
Low, Moderate, High

## Safety Settings

Configures safety and driver assistance features.

### Driver Assistance System

Configures desired level of support and notification for driver assist functions.

Function	Available setting changes
<b>Full-Speed Cruising &amp; Traffic Support</b> Enables Cruising & Traffic Support to operate at highway speeds.	Enable, Disable
<b>Cruise Assist Mode</b> Selects how the vehicle controls speed and position during cruise assist.	Smooth, Standard, Responsive
<b>Cruising &amp; Traffic Support Cancellation Alert</b> Sets the notification alert for Cruising & Traffic Support cancellation.	Audible, Steering Wheel Vibration, Off
<b>Mazda Radar Cruise Control</b> Enables automatic control of following distance when using cruise control.	Enable, Disable
<b>Traffic Sign Speed Limit Sync</b> Automatically limits the vehicle's speed based on posted speed limit signs.	Off, Manual, Automatic
<b>Speed Limit Sync Offset</b> Sets the desired amount of vehicle speed offset from the posted speed limit.	+ 0 km/h, + 0 mph, + 3 km/h, + 3 mph, + 5 km/h, + 5 mph, + 10 km/h, + 10 mph
<b>Audible Cruise Confirmation</b> Enables audible tones when interacting with cruise control.	Enable, Disable
<b>Traffic Sign Recognition System</b> Enables Traffic Sign Recognition.	Enable, Disable
<b>Speed Limit Sign Alert</b> Selects the desired notification type for posted speed limit sign alerts.	Visual, Visual + Audible, Off
<b>Speed Limit Sign Threshold</b> Sets threshold for alert notifications when the posted speed limit is exceeded.	+ 0 km/h, + 0 mph, + 3 km/h, + 3 mph, + 5 km/h, + 5 mph, + 10 km/h, + 10 mph
<b>Speed Limit</b> Enables navigation data to be utilized for Speed Limit Alerts.	Enable, Disable

Function	Available setting changes
<b>Speed Limit Alert</b> Selects the desired notification type for speed limit alerts.	Visual, Visual + Audible, Off
<b>Speed Limit Alert Threshold</b> Selects the desired speed threshold for speed limit alert notifications.	+ 0 km/h, + 0 mph, + 3 km/h, + 3 mph, + 5 km/h, + 5 mph, + 10 km/h, + 10 mph
<b>Adjustable Speed Limiter Alert</b> Select the desired notification type for adjustable speed limiter alerts.	Visual, Visual + Audible, Off
<b>Adj. Speed Limiter Alert</b> Set the desired speed threshold for adjustable speed limiter alert notifications.	+ 0 km/h, + 0 mph, + 3 km/h, + 3 mph, + 5 km/h, + 5 mph, + 10 km/h, + 10 mph
<b>Driver Attention Alert</b> Enables driver attention monitoring and provides alerts when fatigue is detected.	Enable, Disable
<b>Driver Monitoring</b> Enables camera-based Driver Monitoring to detect fatigue and provide alerts.	Enable, Disable
<b>Restore Factory Settings</b> Restores the Driver Assistance System settings to the factory defaults.	—

## Safety Alerts

Configures alert notifications used for i-ACTIVSENSE safety features.

Function	Available setting changes
<b>Front Cross Traffic Alert</b> Enables alerts when a moving object may cross into the vehicle's forward path.	Enable, Disable
<b>Front Cross Traffic Alert</b> Selects the desired Front Cross Traffic Alert notification type.	Visual, Visual + Audible, Off
<b>Front Cross Traffic Alert Alert Timing</b> Sets the desired alert timing for the Front Cross Traffic Alert.	Early, Normal, Late
<b>Front Cross Traffic Alert View Monitor</b> Enables the View Monitor display when a Front Cross Traffic Alert occurs.	Enable, Disable

Function	Available setting changes
<b>Rear Cross Traffic Alert</b> Enables alerts when a moving object may cross into the vehicle's rearward path.	Enable, Disable
<b>Rear Cross Traffic Alert</b> Selects the desired Rear Cross Traffic Alert notification type.	Visual, Visual + Audible, Off
<b>Distance Recognition Support System</b> Displays a following distance indicator on the gauge cluster and active driving display.	Enable, Disable
<b>Lane Departure Warning System</b> Enables Lane Departure Warning System to alert driver of lane departure risks.	Enable, Disable
<b>Lane Departure Warning System Alert Type</b> Sets the desired notification type for Lane Departure Warning System alerts.	Audible, Steering Wheel Vibration, Audible+Steering Wheel Vibration, Off
<b>Blind Spot Monitoring</b> Selects the desired Blind Spot Monitoring alert notification type.	Visual, Visual + Audible, Off
<b>Blind Spot Monitoring Alert Timing</b> Selects the desired alert timing for Blind Spot Monitoring.	Early, Normal, Late
<b>Vehicle Exit Warning</b> Selects the desired Vehicle Exit Warning notification type.	Visual, Visual + Audible, Off
<b>Vehicle Exit Warning Warning Timing</b> Sets the desired notification timing for Vehicle Exit Warning.	Early, Normal, Late
<b>Restore Factory Settings</b> Restores the safety alert settings to the factory defaults.	—



### Active Safety

Configures i-ACTIVSENSE active safety features.

Function	Available setting changes
<b>Distance &amp; Speed Alert</b> Enables the vehicle to provide alerts for following distance.	Enable, Disable
<b>Restore Factory Settings</b> Restores the Active Safety settings to the factory defaults.	—

### Collision Avoidance

Configures i-ACTIVSENSE collision avoidance features.

Function	Available setting changes
<b>Distance &amp; Speed Alert</b> Enables the vehicle to provide alerts for following distance.	Enable, Disable
<b>Lane-keep Assist System</b> Enables lane-keep steering assistance to help the vehicle stay within the lane.	Enable, Disable
<b>Smart Brake Support</b> Enables Smart Brake Support to alert and intervene when collision is imminent.	Enable, Disable
<b>Smart Brake Support Alert Timing</b> Selects the desired timing for the Collision Avoidance Alert notification.	Early, Normal, Late
<b>Smart Brake Support Smart Brake Support Audible Alerts</b> Enables Smart Brake Support audible alerts.	Enable, Disable
<b>Smart Brake Support Front Crossing</b> Enables detection of people and vehicles crossing in front of the vehicle's path.	Enable, Disable
<b>Smart Brake Support Front Crossing Alert</b> Enables alerts when people and vehicles may cross in front of the vehicle's path.	Enable, Disable
<b>Smart Brake Support Turn-Across Traffic</b> Enables braking intervention if a collision is imminent while turning across traffic.	Enable, Disable

Function	Available setting changes
<b>Smart Brake Support</b> <b>Head-on Collision Mitigation</b> Enables automatic emergency braking intervention when a head-on collision is imminent.	Enable, Disable
<b>Smart City Brake Support</b> Enables Smart City Brake Support to alert and intervene when collision is imminent.	Enable, Disable
<b>SBS/SCBS</b> Enables SBS/SCBS to alert and intervene when collision is imminent.	Enable, Disable
<b>SBS/SCBS</b> <b>Pedestrian/Cyclist Detection</b> Includes cyclist and pedestrians in SBS.	Enable, Disable
<b>SBS/SCBS</b> <b>Alert Timing</b> Selects the desired timing for the Collision Avoidance Alert notification.	Early, Normal, Late
<b>SBS/SCBS</b> <b>Alert Timing</b> Selects the desired timing for the Collision Avoidance Alert notification.	Early, Late
<b>SBS/SCBS</b> <b>Smart Brake Support Audible Alerts</b> Enables Smart Brake Support audible alerts.	Enable, Disable
<b>SBS/SCBS</b> <b>Front Crossing</b> Enables detection of people and vehicles crossing in front of the vehicle's path.	Enable, Disable
<b>SBS/SCBS</b> <b>Front Crossing Alert</b> Enables alerts when people and vehicles may cross in front of the vehicle's path.	Enable, Disable
<b>SBS/SCBS</b> <b>Turn-Across Traffic</b> Enables braking intervention if a collision is imminent while turning across traffic.	Enable, Disable
<b>SBS/SCBS</b> <b>Head-on Collision Mitigation</b> Enables automatic emergency braking intervention when a head-on collision is imminent.	Enable, Disable

Function	Available setting changes
<b>Smart Brake Support [Rear]</b> <sup>*1</sup> Enables Smart Brake Support [Rear] to alert & intervene when collision is imminent.	Enable, Disable
<b>Emergency Lane Keeping</b> Enables Emergency Lane Keeping to intervene when a collision is imminent.	Enable, Disable
<b>Emergency Lane Keeping Road Keep Assist</b> Enables automatic steering assistance to help keep the vehicle from leaving the road.	Enable, Disable
<b>Emergency Lane Keeping Blind Spot Assist</b> Enables lane-keeping assistance when changing lanes without signaling if a vehicle is detected.	Enable, Disable
<b>Emergency Lane Keeping Head-on Collision Avoidance Assist</b> Enables Head-on Collision Avoidance to alert and intervene when a collision is imminent.	Enable, Disable
<b>Emergency Lane Keeping Lane-keep Assist System</b> Enables lane-keep steering assistance to help the vehicle stay within the lane.	Enable, Disable
<b>Emergency Signal System</b> Flashes the rear turn signal indicators under emergency braking to alert following vehicles.	Enable, Disable
<b>Restore Factory Settings</b> Restores the Collision Avoidance settings to the factory defaults.	—

\*1 Including Smart Brake Support [Rear Crossing].

## **View Monitor**

Configures View Monitor camera view angles and display settings.

Function	Available setting changes
<b>Display Priority View at Start Up</b> Enables View Monitor to be displayed after vehicle is started.	Enable, Disable
<b>Priority View [STV]</b> Selects the default view to be displayed after vehicle is started.	See-Through, Front Wide, Last

Function	Available setting changes
<b>Priority View [360VM]</b> Selects the default view to be displayed after vehicle is started.	Side, Front, Front Wide, Last
<b>Automatic Front View Display</b> Enables front view to be automatically displayed after vehicle is taken out of reverse.	Enable, Disable
<b>Dynamic Guidelines</b> Enables dynamic path guidelines to be shown on the rear view display.	Enable, Disable
<b>Restore Factory Settings</b> Restores the View Monitor settings to the factory defaults.	—

## **Parking Sensor**

Configures Parking Sensor settings.

Function	Available setting changes
<b>Parking Sensor</b> Enables Parking Sensor system to detect objects in front of and behind the vehicle.	Enable, Disable
<b>Parking Sensor Display Guidance</b> Enables Parking Sensor display guidance to be shown on the View Monitor display.	Enable, Disable
<b>Rear Parking Sensor Alert Volume</b> Sets desired volume level for rear Parking Sensor alerts.	Low, Moderate, High, Off
<b>Front Parking Sensor Alert Volume</b> Sets desired volume level for front Parking Sensor alerts.	Low, Moderate, High, Off
<b>Restore Factory Settings</b> Restores Parking Sensor settings to the factory defaults.	—

### Speed Alert

Configures Speed Alert notifications.

Function	Available setting changes
<b>Speed Alert</b> Enables alerts for when the desired speed is exceeded.	Enable, Disable
<b>Speed Alert Threshold</b> Selects a desired speed that when exceeded will provide an alert notification.	30 km/h — 250 km/h
	20mph — 150mph
<b>Speed Alert Notification Type</b> Selects the type of alert provided when speed threshold is exceeded.	Visual, Audible, Visual + Audible
<b>Restore Factory Settings</b> Restores the speed alert settings to the factory defaults.	—

### Pedal Misuse Alert

Alerts the driver when the accelerator and brake pedals are depressed simultaneously.

Available setting changes
Enable, Disable

## Vehicle Settings

Configures vehicle convenience features.

### Paddle Shift Logic

Configures how to exit Manual shift mode after using steering wheel paddle shifters.

Available setting changes
<b>Momentary Shift Control</b> Reverts to Drive when paddle shifters are no longer used or +/-OFF switch is held.
<b>Permanent Shift Control</b> Stays in Manual shift mode until the +/-off switch is held or vehicle is re-started.

### Doors

Configures door-related settings.

Function	Available setting changes
<b>Hands-Free Liftgate</b> Enables hands-free liftgate operation when a foot is waved below the rear bumper.	Enable, Disable
<b>Automatic Door Locks</b> Configures when the automatic door locks operate.	Lock: While Driving, Lock: While Driving, Unlock: Ignition Off, Lock: In Gear, Lock: In Gear, Unlock: In Park, Lock: While Driving, Unlock: In Park, Off
<b>Automatic Re-Lock Wait Time</b> Sets the time for the doors to re-lock if a door is not opened.	30 seconds, 60 seconds, 90 seconds
<b>Keyless Auto-Lock</b> Enables the vehicle to automatically lock when the driver walks away.	Enable, Disable
<b>Keyless Beep Confirmation Volume</b> Adjusts the beep volume when locking/unlocking doors.	Low, Medium, High, Off
<b>Keyless Unlock Mode</b> Selects which doors unlock with the keyless entry switch.	Once: All Doors, Once: Driver's Door, Twice: All Doors

Function	Available setting changes
<b>Power Liftgate Keyless Control</b> Configures when the power liftgate can be operated from the keyfob.	Only When Unlocked, Always
<b>Restore Factory Settings</b> Restores door settings to the factory defaults.	—

## Exterior Lighting

Configures settings for the vehicle's exterior lighting.

Function	Available setting changes
<b>Automatic Headlight Sensitivity</b> Adjusts the sensitivity of the automatic headlight illumination feature.	Low, Medium-Low, Medium, Medium-High, High
<b>Automatic Headlight Timeout</b> Sets the length of delay before headlights turn off.	30 seconds, 60 seconds, 90 seconds, 120 seconds, Off
<b>Adaptive LED Headlights (ALH)</b> Configures the use of Adaptive LED Headlights & Marking Lights.	ALH: On, Marking Light: On, ALH: On, Marking Light: Off, Off
<b>Adaptive LED Headlights (ALH)</b> Switches between high and low beam automatically.	Enable, Disable
<b>High Beam Control System (HBC)</b> Switches between high and low beam automatically.	Enable, Disable
<b>Adaptive Front-Lighting System (AFS)</b> Adjusts lighting output based on driving conditions.	Enable, Disable
<b>Daytime Running Lights (DRL)</b> Enables the daytime running lights.	Enable, Disable
<b>Manual Headlight Leveling</b> Adjusts the headlight beam angle.	Beam angle (11 levels)
<b>Coming Home Light</b> Sets the length of delay before headlights turn off.	30 seconds, 60 seconds, 90 seconds, 120 seconds, Off
<b>Leaving Home Light</b> Turns headlights on with unlock button press on key.	Enable, Disable

Function	Available setting changes
<b>Restore Factory Settings</b> Restores exterior lighting settings to factory defaults.	—

### Interior Lighting

Configures settings for the vehicle's interior lighting.

Function	Available setting changes
<b>Ambient Lighting</b> Sets the intensity of ambient interior lighting.	Low, Med, High, Off
<b>Illuminated Entry Duration</b> Selects the desired illuminated entry lighting durations.	7.5 seconds, 15 seconds, 30 seconds, 60 seconds
<b>Restore Factory Settings</b> Restores interior lighting settings to factory defaults.	—

### Rain-Sensing Wipers

Enables automatic rain-sensing windshield wipers.

Available setting changes
Enable, Disable

### Automatic Folding Side Mirrors

Enables the side mirrors to fold automatically.

Available setting changes
Enable, Disable

### Turn Signals

Configures settings for turn signal operation.

Function	Available setting changes
<b>Three Flash Turn Signal</b> Enables the turn signal to flash three times then stop.	Enable, Disable



Function	Available setting changes
<b>Turn Signal Indicator Volume</b> Adjusts the volume of the turn signal indicator.	Low, Moderate, High
<b>Restore Factory Settings</b> Restores the turn signal settings to the factory defaults.	—

### Rear Window Defogger

Selects the duration of rear window defogger operation.

Available setting changes
Automatic Shut Off, Continuous

### Link Seat & Climate Control Temperatures / Occupant Comfort

Enable climate control to activate occupant comfort features when set to AUTO.

Available setting changes
Enable, Disable

The functions can be set individually depending on the vehicle.

Function	Available setting changes
<b>Driver's Seat Temperature</b>	Enable, Disable
<b>Passenger Seat Temperature</b>	Enable, Disable
<b>Heated Steering Wheel</b>	Enable, Disable

### Rear Seat Alert

Configures the Rear Seat Alert notification method.

Available setting changes
Interior Notification, Interior + Exterior Notification, Off

### Airbags

Configures airbag settings for front & rear passengers.

Function	Available setting changes
<b>Front Passenger Airbag</b> Enables or disables the front passenger airbag.	Enable, Disable
<b>Rear Passenger Airbags</b> Enables or disables the rear passenger airbags.	Enable, Disable
<b>Restore Factory Settings</b> Restores the airbag settings to the factory defaults.	—

### Driving Position

Configures driver's seating position preferences.

Function	Available setting changes
<b>Steering Wheel Entry/Exit Assist</b> Enables steering wheel movement at entry/exit for recognized driver profiles.	Enable, Disable
<b>Driver's Seat Entry/Exit Assist</b> Configures driver's seat movement at entry/exit for recognized driver profiles.	Standard, Partial, Off
<b>Restore Factory Settings</b> Restores the driving position settings to the factory defaults.	—

### Fuel Door Lock Delay

Sets length of delay until fuel door locks after vehicle is locked.

Available setting changes
0 seconds, 30 seconds, 60 seconds, 90 seconds, 120 seconds

## Connectivity Settings

Connection settings can be configured for linking Bluetooth® and Smartphone functions.

### **Bluetooth® Settings , Bluetooth®/Phone Connectivity Settings**

Configures Bluetooth connectivity and related settings.

Function	Explanation
Bluetooth®	Turns on when using Bluetooth®. When checked, the status is ON. When unchecked, the status is OFF.
Pair New Device	Establishes Bluetooth connectivity with a mobile device.
[Name of registered Bluetooth® device]	Selects the connection type used for the device.
Device Connection Order	Sets the device connection priority order.
Delete Paired Device	Terminates Bluetooth connectivity with a mobile device.
Advanced Settings	You can change the Bluetooth® automatic connection ON/OFF, set the connection order, and reset the Bluetooth® settings.

#### **NOTE**

- The Bluetooth® connection cannot be used while Apple CarPlay™ is connected. If you want to connect to Bluetooth®, disconnect Apple CarPlay™.
- If you want to register (pair) a device or change the connection device while Android Auto™ is connected, disconnect Android Auto™.

### **Bluetooth® Registration**

#### **Device registration (pairing)**

 
To use Bluetooth® Audio and Hands-Free, register a Bluetooth® device using the following procedure. You can register up to 5 devices that are equipped with the Bluetooth® communication function, such as mobile devices or mobile phones.

#### **NOTE**


Bluetooth® may not operate for 1 or 2 minutes after the ignition or power switch is switched to ACC or ON. However, this does not indicate a problem. If the Bluetooth® device is not connected automatically after 1 or 2 minutes have passed, make sure that the Bluetooth® setting on the device is enabled and attempt to reconnect the Bluetooth® device from the Mazda Connect side.

## Pairing procedure


1. Select "Pair New Device".

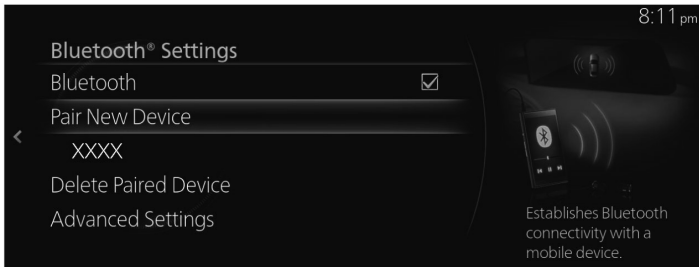

 2. Check the content on the displayed Bluetooth Search screen and select "Continue".

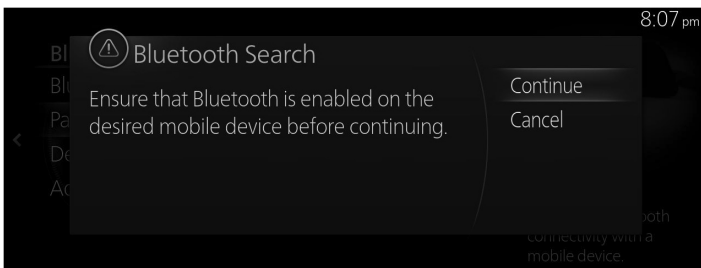

 3. Select the name of the device you want to connect from the displayed Bluetooth® device list.

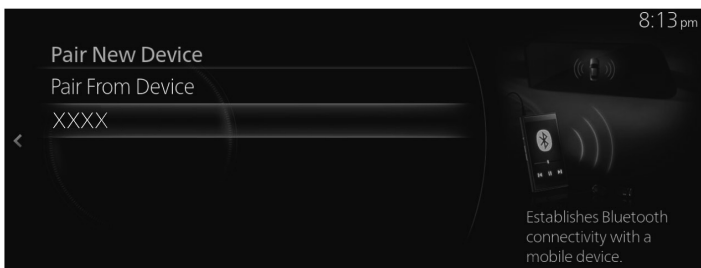

4. **(Device with Bluetooth® version 2.0 or lower)**  
 [Operations using the Bluetooth® device]  
 Check the 4-digit passcode displayed on the center display and press the confirmation button or input the passcode.

**(Device with Bluetooth® version 2.1 or higher)**  
 [Operations using the Bluetooth® device]  
 Make sure that the 6-digit passcode displayed on the center display is also displayed on the Bluetooth® device.

5. When the pairing is successful, the Device Connected screen is displayed on the center display.

**The Bluetooth® device name you want to connect in Step 3 is not displayed in the list.**

1. Select “Pair From Device” at the top of the list.
2. [Operations using the Bluetooth® device]  
Select “Mazda” displayed in the search result list of the Bluetooth® device and confirm the passcode or input the passcode.
3. When the pairing is successful, the Device Connected screen is displayed.

#### **NOTE**

- If the Bluetooth® device is compatible with the phonebook import and short message functions, the phonebook, call history, and short messages (SMS) are downloaded.
- A download permission operation on the Bluetooth® device might be required for the phonebook import and short message functions to operate.
- Regarding the connection of your Bluetooth® device to Bluetooth®, always refer to the Bluetooth® device’s owner’s manual.

#### **Pairing and automatic reconnection**

After the pairing is completed, the previous Bluetooth® connection is automatically restored the next time the system is activated. When Bluetooth® Hands-Free is turned on or the ignition or power switch is switched from OFF to ACC, the device’s connection status is displayed on the screen.

#### **NOTE**

 
- If pairing is redone on the same Bluetooth® device, you need to delete “Mazda” from the Bluetooth® device once.
- If pairing information is deleted only on the Bluetooth® device or the vehicle, it is necessary to delete the registration on the pairing partner as well and do pairing again.
- The Bluetooth® automatic connection when the Mazda Connect is activated may require that the Bluetooth® device be in a connectable state.
- Before pairing, make sure that Bluetooth® is on, both on your device and on the vehicle.

#### **Bluetooth® device selection**

When several Bluetooth® devices have been registered, you can select the Bluetooth® device to be connected. When you want to connect a different Bluetooth® device that has already been paired, change the Bluetooth® device connection using the following procedure.

## Connecting a different Bluetooth® device

1. Select the name of the device you want to connect from the Bluetooth® device list displayed on the Bluetooth® Settings screen.

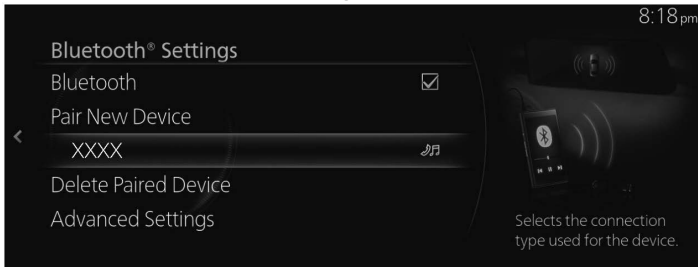

2. Select the connection method.




- **Apple CarPlay:** Turns on when using Apple CarPlay™. When checked, the status is ON. When unchecked, the status is OFF.
- **Android Auto:** Turns on when using Android Auto™. When checked, the status is ON. When unchecked, the status is OFF.
- **Phone and Audio:** Connects as both a Hands-Free and Bluetooth® Audio device.
- **Phone:** Connects as a Hands-Free device.
- **Audio:** Connects as Bluetooth® Audio.

### NOTE

 
- The following functions can be used for the Hands-free or audio.
  - **Hands-Free:** Telephone, SMS (Refer to Bluetooth® Hands-Free on page 2-95.)
  - **Audio:** Bluetooth® Audio (Refer to Bluetooth® on page 2-61.), Pandora® (Refer to Pandora® on page 2-55.)
- Some Bluetooth® devices cannot separate pairing for Bluetooth® Hands-Free and Bluetooth® Audio, therefore, it may be connected as “Phone and Audio” even if only “Phone” or “Audio” is selected.

### Disconnecting a Bluetooth® device connection

1. Select the name of the device currently connected from the Bluetooth® device list displayed on the Bluetooth® Settings screen.

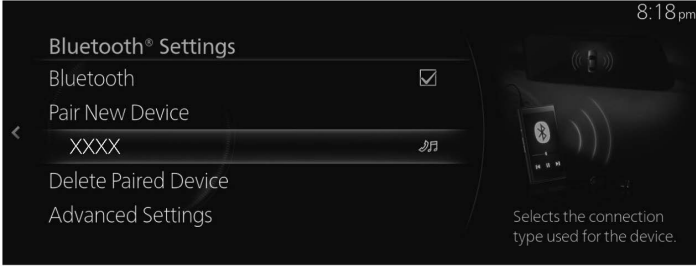

 2. Select "Disconnect".

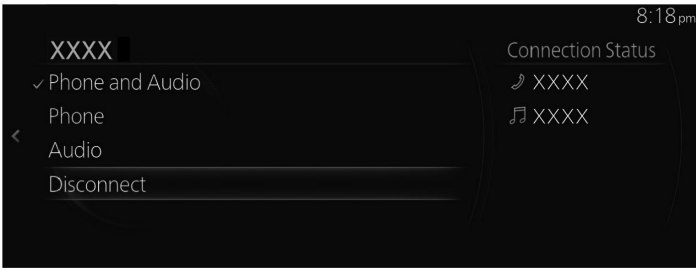


### NOTE


A connection can also be disconnected by setting the Bluetooth® connection setting to OFF.

### Deleting a Bluetooth® device

 
1. Select "Delete Paired Device".

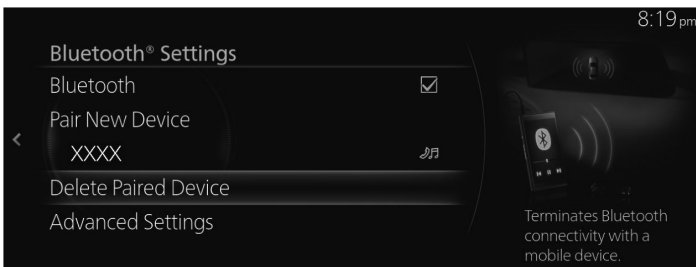

 2. Select the name of the device you want to delete from the registration.

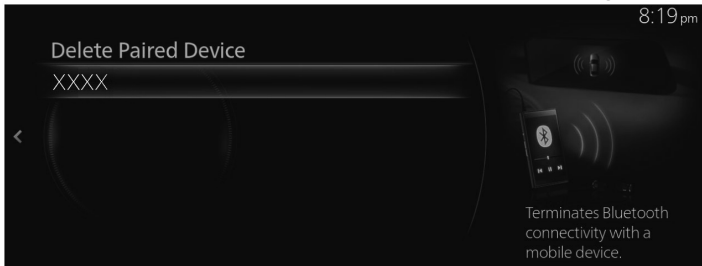

3. Select "Delete" on the Delete Device(s) screen.

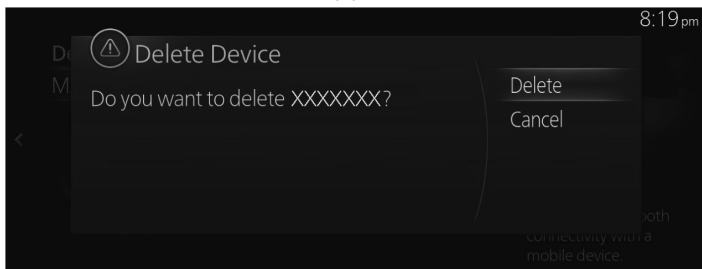


**NOTE**

- When a Bluetooth® device is deleted from the registration, the phonebook, call history, and short messages of the deleted Bluetooth® device are also deleted.
- If a Bluetooth® device is deleted from the registration, also delete "Mazda" from Bluetooth® device.

**Changing the Pairing Code**


The Pairing Code used when pairing can be changed using the following procedure.

 1. Select "Advanced Settings".

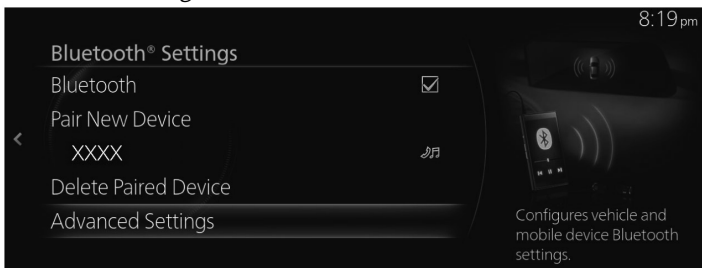




 
2. Select "Vehicle Bluetooth Settings".

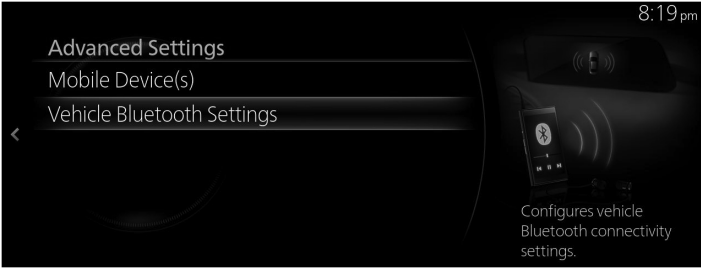

 
3. Select "Pairing Code".

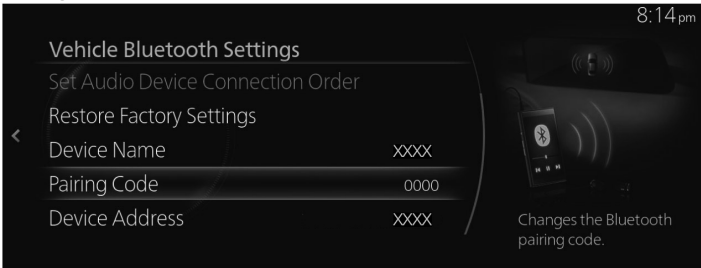

 4. Input the new Pairing Code.

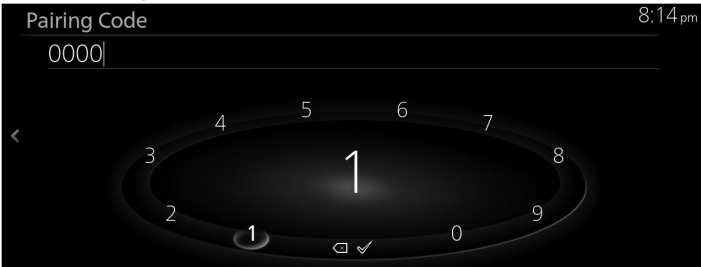

 5. Select ✓.

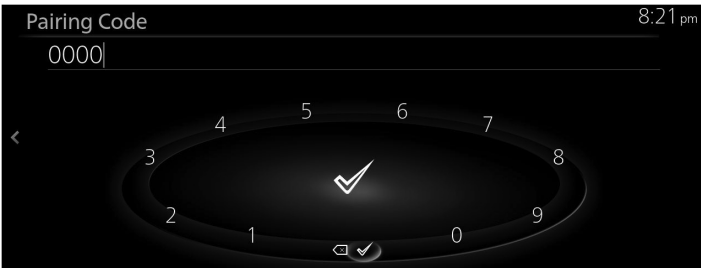

**NOTE**

The connection of already paired Bluetooth® devices is unaffected even if the Pairing Code is changed.

**Smartphone Connectivity Settings**

Configures device-dependent settings including Android Auto & Apple CarPlay.

 
Function	Explanation
Apple CarPlay Settings	Configures Apple CarPlay settings for connected devices.
Android Auto Settings	Configures Android Auto settings for connected devices.

**Changing the Apple CarPlay™/Android Auto™ connection settings**


The setting for each iPhone®/Android™ Smartphone can be changed. For the setting to take effect, it is necessary to connect the device again.

(Example: Changing the Apple CarPlay™ connection settings)


1. Select “Apple CarPlay Settings”.

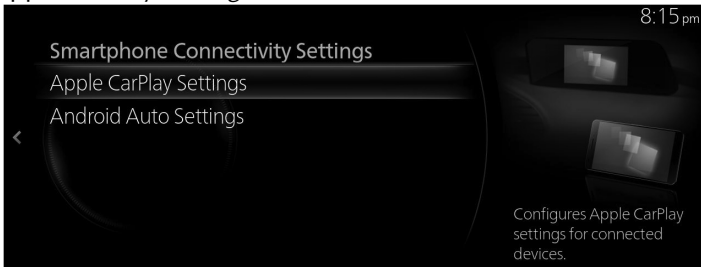

 
2. Select the name of the device for which you want to change the settings from the list of currently registered iPhone®.

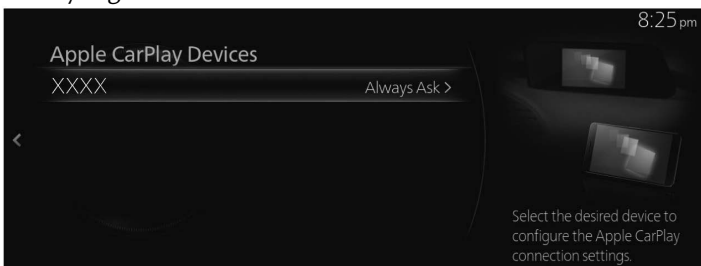

 3. Select "Device Connection Status".

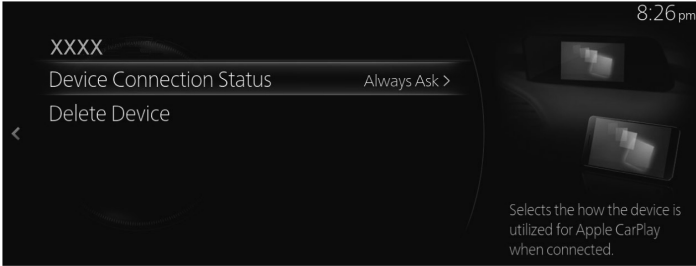

 
4. Select the connection method.

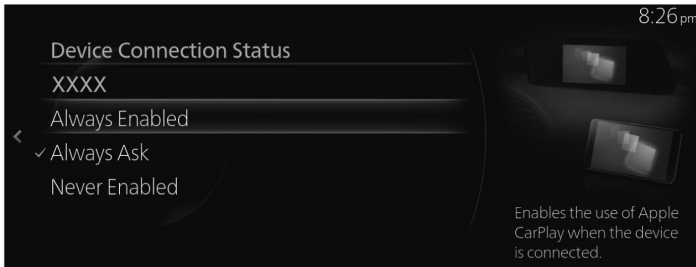

### Deleting the Apple CarPlay™/Android Auto™ registration

(Example: Deleting an iPhone® registration)

 
1. Select "Apple CarPlay Settings".

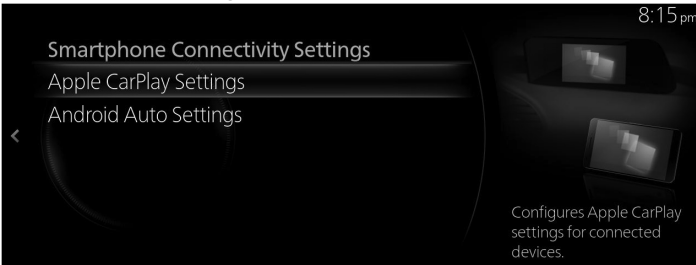


2. Select the name of the device you want to delete from the registration from the list of currently registered iPhone®.



 3. Select "Delete Device".

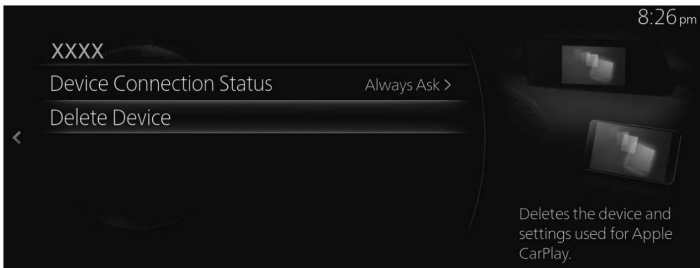

 4. Select "Delete" on the Apple CarPlay Device Deletion screen.

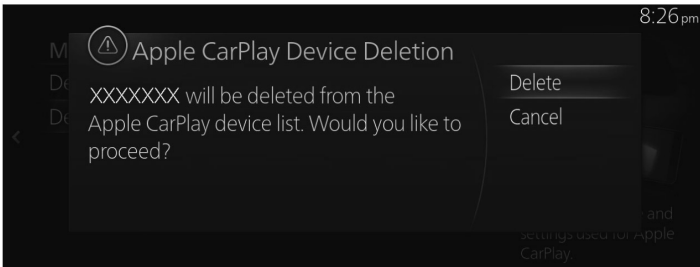

## Wireless Charging Settings

Configures wireless charging settings.

Function	Available setting changes
<b>Wireless Charging</b> Enables wireless charging for mobile devices.	Enable, Disable
<b>Prioritize AM Reception</b> Prioritizes AM reception by reducing charging speed.	Enable, Disable

## Wi-Fi Settings

Configures Wi-Fi connectivity and related settings.

Function
<b>Wi-Fi Hotspot</b> Enables Wi-Fi connectivity. Requires activation via the MyMazda smartphone app.
<b>SSID</b> Changes the Wi-Fi network name (SSID).
<b>Wi-Fi Password</b> Changes the Wi-Fi password.
<b>Hide Access Point</b> Disables the broadcast of the Wi-Fi network name (SSID).
<b>Wi-Fi Security Type</b> Selects the desired Wi-Fi security protocol.
<b>Wi-Fi Channel</b> Selects the desired Wi-Fi channel.

## Driver Personalization System

### Driver Personalization System

Registers a driver or edits the driver information.

Available setting changes
<b>Driver 1, Driver 2, Driver 3, Driver 4, Driver 5, Driver 6, Guest</b> Select the desired driver profile.
<b>Save Driving Position</b> Saves the current driving position.
<b>Edit Driver Profile</b> Edits the name and/or image associated with a driver profile.
<b>Add New Driver</b> Creates a new driver profile.
<b>Delete Driver</b> Deletes the selected driver profile(s).

## System Settings

Configures language, time, and other general settings.

### Clock

Adjusts the time and how it is displayed.

Function	Available setting changes
<b>Manual Time Adjustment</b> <sup>*1</sup> Manually sets the clock to the desired time.	Select “+” to advance the hours/minutes, and select “-” to move the hours/minutes back. You can select “am/pm” only when the “24-Hour Clock” item has been disabled.
<b>GPS Time Synchronization</b> Automatically synchronizes the clock using GPS location data.	Enable, Disable
<b>24-Hour Clock</b> Displays the time on a 24-Hour clock.	Enable, Disable
<b>Daylight Saving Time</b> <sup>*1</sup> Enables or disables Daylight Saving Time.	Enable, Disable
<b>Time Zone</b> <sup>*1</sup> Selects the desired time zone.	Time Zone

\*1 You can make setting changes only when the “GPS Time Synchronization” item or the “Navigation” is disabled.

### Driver Settings

Configures driver-specific vehicle personalization settings.

Function	Available setting changes
<b>Driver Identification</b> Automatically identifies the driver based on the key.	Enable, Disable
<b>Driver Selection</b> Manually selects the desired driver.	Driver
<b>Edit Driver Name(s)</b> Edits the name of the selected driver.	Driver’s name

### Voice Recognition Settings

Configures voice recognition and voice guidance settings.

Function	Available setting changes
<b>Guidance Volume</b> Adjusts the volume of the Voice Guidance responses.	Volume (63 levels)
<b>Guidance Length</b> Selects the length of Voice Guidance responses.	Normal, Brief
<b>Barge-In</b> Allows user to interrupt with desired commands during Voice Guidance responses.	Enable, Disable
<b>Voice Recognition User's Guide</b> Provides example phrases for a variety of Voice Recognition-compatible functions.	—

### Language

Selects the desired system display language.

Available setting changes
Language

### Temperature

Selects the desired unit of temperature.

Available setting changes
°C, °F

### Distance/Speed

Selects the desired unit of distance and speed.

Available setting changes
mi • mph, km • km/h



**Fuel Efficiency**

Selects the desired unit of expression for fuel efficiency.

Available setting changes
L/100km, km/L, km/gallon

**Energy Efficiency**

Selects the desired expression of energy efficiency.

Available setting changes
kWh/100km, km/kWh

**Fuel/Energy Efficiency**

Selects the units of fuel efficiency/energy efficiency.

Available setting changes
L/100km, kWh/100km, km/L, km/kWh, km/gallon, km/kWh

**Pressure**

Selects the desired unit of air pressure.

Available setting changes
psi, kPa, bar, kgf/cm <sup>2</sup>

**Gracernote Database Update**

Updates the Gracernote Database metadata database.

Function	Content
Update	Starts the Gracernote Database update process.
Update History	Displays the update history of the Gracernote Database.

### Use Gracenote Database Album Art

Utilizes Gracenote Database for displayed Album Art.

Available setting changes
Enable, Disable

### Connected Services

Enables or disables the vehicle's connected services.

Available setting changes
Enable, Disable

### Software Update

Installs available software updates.

Function	Content
<b>Check for Software Updates</b>	Checks for available software updates.
<b>Automatically Check for Updates</b>	Enables the system to automatically check for software updates.

### System Information

Displays system software information.

Function	Content
<b>Legal Notices</b>	Displays system software licensing information.
<b>Version Information</b>	Displays system software version information.

### Restore All Factory Settings

Removes all personal information and restores all settings to the factory defaults.